Aton C26

User Manual

swisscom fixnet

CONTENT

Getting started 3
Safety Precautions 3
Environmental impact 3
Contents of the package 4
Location 4
Basic Steps for Installing the C26 4

Functions of the phone 5
Characteristics 5
Description of the keys 5
Description of the display 6

Using the phone 7
Language setting 7
How to use this phone 7
External call 7
Dialling a number 7
Answering a call 8
Microphone mute 8
”Register recall” / flash signal 8
Pause 8
Redialling 9

Caller list 10
Dialling a number from the caller list 10
Saving the CID to the phonebook or direct memory (for speed-dialling) 10
Deleting one / all calls 10
Deleting a single entry 10
Delete all entries 10

Phonebook 11
Dialling from the phonebook 11
Adding a new name/number 11
Editing the phonebook 11
Deleting an entry from the phonebook 12
Deleting all entries from the phonebook 12

Direct memories 13
Memory keys (M01-M05)/voice portal key 13
Dialling a number on a memory key (M01-M05) / voice portal key 13
Saving numbers to memory keys (M01-M05) / voice portal key 13
Deleting numbers on memory keys (M01-M05) / voice portal key 13
Speed dialling keys (2-0) 13
Dialling a number on a speed-dialling key (2-0) 13
Saving a number to a speed-dialling key 13

Combox 14
Saving the number of the Combox 14
Editing the Combox number 14
Deleting the Combox number 14
Dialling the number of the Combox 14

CONTENT

Menu set-up 15
Ringer tone setting 15
Ringer volume setting 15
Contrast setting 15
Flash time setting 15
Date/time setting 15
Language setting 16
Reset 16
Default settings 16

Annex 17
Maintenance/Warranty 17
Conformity 17

The C26 has been designed to allow emergency calls to be made in the event of a mains failure.
Make a call:

- Pick up the handset
- Dial the required number
- Have your conversation
- Hang up

Safety Precautions

Do not expose the telephone to humidity or any types of liquid. To avoid the risk of electrocution, do not open the telephone.

This telephone should not be used in areas where there is a risk of explosion or gas leaks. There is a slight possibility that this telephone may be damaged by electrical storms. We therefore recommend unplugging the telephone from the line during thunderstorms.

Your telephone may interfere with other electrical equipment such as televisions, radios, radio alarms or computers if placed too close to them. We recommend keeping it at least a meter away from such equipment.

To clean the product, use a damp (not wet) cloth or antistatic wipe. Never use a dry cloth as this may cause a static shock. Never spray cleaning fluid directly onto the telephone.

Environmental impact

At the end of its working life this device must not under any circumstances be disposed of as normal waste. It must be taken to a point of sale or central collection point for electronic and electrical devices in accordance with the Swiss Ordinance on the Return, Taking Back and Disposal of Electrical and Electronic Appliances (ORDEA).
The individual materials are recyclable as indicated. By reutilizing, recycling or re-using them in any other form, you are making a major contribution towards environmental protection.

Contents of the package

- 1 telephone base unit
- 1 handset with handset cord
- 1 telephone line with Swiss connector
- 3 Manuals (German, French and Italian)

Location

Keep the phone on a non-slip surface. Varnish and other synthetic finishes can attack and soften the plastic feet on the phone. If the feet become damaged in this way, they can leave marks on surfaces. Swisscom Fixnet Ltd declines all responsibility for such damage.

Basic Steps for Installing the C26

❍ Connect the telephone line cord to the phone cord socket on the back of the base unit and then connect the line phone socket to the wall.

❍ Connect the coiled handset cord to the socket on the back of the base unit.

Characteristics

- 3- line display with 1 icon line, 1 7-segment line and 1 dot matrix line
- Memories: 5 memory keys, 10 indirect dialling keys and a phonebook with 40 entries
- Call lists (incoming, missed) with 20 entries
- Caller ID, including the caller's name if this has been stored in a memory
- Redial list with 5 entries
- 10 ring tones
- Ring tone volume: high, medium, low
- Mute function
- Dialling pause
- Call duration displayed (appears automatically for a few seconds during each call)

Description of the keys

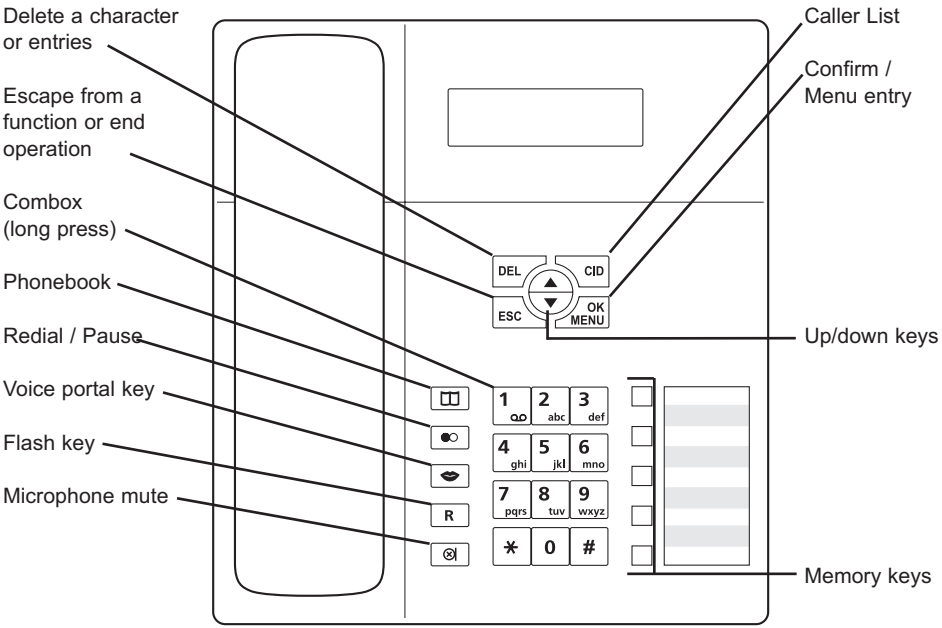

Description of the display

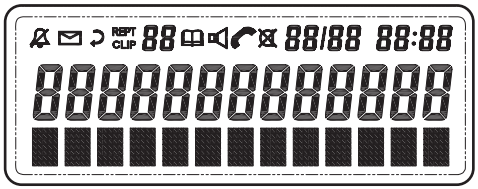

Icons	Function	Switched on	Flashing
✉	Message Waiting Indication	Not used	New message present in the Combox
⊠	Microphone Mute	The microphone is muted	Not used
📞	Handset On	Handset is off-hook	Pick up the handset to dial the number
🕮	Phone Book	Operation in Phone Book Mode	Not used
REPT	Indicates a repeat call in the caller list	Repeat call present in the caller list	Not used
CLIP	Indicates new missed calls	A new missed call is present in the caller list	A new call has been missed
88	Counts the no. of entries: - during review of caller list	While the - caller list - phonebook are being displayed.	Not used
88/88	Displays date/month	After setting	Not used
88:88	Displays hours/minutes	After setting	Not used

Language setting

- Press the **Menu** key while in idle mode
- Select *Sprache* with the **up/down** key and press **OK**
- Select the desired language and press **OK**

How to use this phone

Your telephone can be operated via a menu. The menu gives you access to the setting procedures and the telephone functions. Certain menu items open a sub-menu after being selected. The menu is controlled by using the navigation keys.

The timeout is 20s while in the menu-setting mode. The time starts to be counted once the last key has been pressed. After timeout the unit will return to idle mode without saving any data.
While in menu mode, press the **ESC** key once for the unit to exit the current setting mode.

Idle mode:

CLIP10: There have been 10 new calls.

External call

Dialling a number
Off-hook dialling:
- Lift the handset
- Dial the number that you want using the keypad (1~0, *, #)

On-hook dialling:
- Dial the number that you want using the keypad (1~0, *, #)
- Lift the handset
  - The number will be dialled after approx. 2s.

Note: Using the Pause/Redial key, a pause can be added after any dialled digit while the handset is on hook (e.g. for PABX access or to control external functions).

Answering a call
To answer an incoming call, pick up the handset. During talking mode, the following will be displayed:

If the name/number is available, it will be shown in the lower line. The name has priority.

During a call the handset icon is turned on. The time counter starts after 8s. The caller's number will disappear after approx. 8s.

Microphone mute

While in talking mode, press the **Mute** key once, then the microphone will be muted. The following will be displayed:

The Mute icon is turned on.
To release the mute function, press the **Mute** key again.

"Register recall" / flash signal

During talking mode, press the **Recall** (Flash) key. The unit will send a flash signal to the network. The default time is 100ms.

Pause

To insert a pause, press the **Pause** (Redial) key while typing a number. This function can be used in dialling and storing mode. The default time for the pause is 2s. During the pause, the unit remains in the mute state.

Redialling

Note: Numbers which are pressed more than 4 seconds after the last key will not be saved to the redial buffer.

The redial memory stores the last 5 dialled numbers with 24 digits for each number. If the number is over 24 digits long, the first 24 digits will be stored to memory.

In stand-by mode:
- Press **Redial** once, then the last number dialled will be shown on the screen
  (If the number is over 13 digits long, the number will move across the screen)
- Press the **up** or **down** key to select the number you want to dial
- Pick up the handset to make the call
  (the number will be dialled after 2 seconds)

Note: To save the number to a memory:
- Press the **Redial** key
- Choose the desired entry using the **up** or **down** key
- Press **OK** to confirm
- Choose the desired memory using the **up** or **down** key:

  Phonebook

  M01 – M05 5 memory keys at the right

  M2 – M0 (keys 2 to 0) Speed-dial keys (numeric keys)
- Press **OK** to confirm
- Edit the number using the keypad
- Press **OK** to confirm
- Press keys to edit the name. To switch to capitals and back please press the * key.
- Enter the name via the keypad and press **OK** to save the data.

In the off-hook state:
- Press **Redial**
- Choose the desired entry using the **up** or **down** key
- Press **Redial** again (the number will be dialled immediately)

Note: The redial list can be deleted by the *Reset 1* function.

CALLER LIST

The caller list shows you what calls you have missed. If the telephone network transmitted the number, name and time, then these will be shown in the caller list, too.
If the caller's phone number or name was absent or withheld, the LCD will display "- - - -" on the name line. After receiving a new call along with this CID (caller ID), the CLIP icon flashes.

Dialling a number from the caller list

In the on-hook mode:
- Press **CID** (= caller ID)
- Choose the desired entry using the **up** or **down** key
- Pick up the handset to dial the number (the number will be dialled after 2s).

In the off-hook mode:
- Press **CID** (= caller ID)
- Choose the desired entry using the **up** or **down** key
- Press **CID** key again, then the number will be dialled immediately.

Note: The caller list can be deleted by the *Reset 1* function.

Saving the CID to the phonebook or direct memory (for speed-dialling)

- Press **CID**
- Choose the desired entry using the **up** or **down** key
- Press **OK** to confirm
- Choose the desired memory key using the **up** or **down** key:

Phonebook	
M01 – M05	5 memory keys at the right
M2 – M0 (keys 2 to 0)	Speed-dial keys (numeric keys)

- Press **OK** to confirm
- Edit the number using the keypad
- Press **OK** to confirm
- Press keys to edit the name. To switch to capitals and back please press the * key
- Enter the name via the keypad and press **OK** to save the data.

Deleting one / all calls

- Press **CID**
- Choose the desired entry using the **up** or **down** key

Deleting a single entry
- Press **DEL**
- Confirm the message "*Delete?*" with **OK**.

Delete all entries
- Press **DEL** for longer than 2s
- Confirm the message "*Delete All*" with **OK**
- Confirm the message "*Sure?*" with **OK**.
- Press **ESC** to leave the menu.

The unit has 40 phonebook entries. Each memory can store numbers with up to 24 digits and names with up to 16 characters.

Dialling from the phonebook

- Press the **phonebook** key while in idle mode.
- Select *Review* and press **OK**
- Choose the desired entry
  (To search for a name, press the first character via the keypad)
- To dial a number, lift the handset (the number will be dialled after 2s)

Note: To dial a displayed number while in off-hook mode, press the phonebook key again.

Adding a new name/number

- Press the **phonebook** key while in idle mode.
- Select *New* with the **up/down** key and press **OK** (the first character will flash)
- Enter the number with the keypad and **DEL** key
- Press **OK** to save the number and go to the name line.
- Edit the name with the keypad. To switch to capitals and back please press the * key
- Press **OK** to save the entry
  (the telephone returns to the phonebook's *Review* mode)

Editing the phonebook

- Press the **phonebook** key while in idle mode.
- Select *Review* with the up/down key and press **OK**
- Choose the desired entry
  (To search for a name, press the first character via the keypad)
- Press **OK** (the first character will flash)
- Choose the position to edit the number with the **up/down** key and change the number with the key-pad or delete it with the **DEL** key
- Press **OK** to save the number and go to the name line.
- Edit the name with the keypad. To switch to capitals and back please press the * key
- Press **OK** to save the entry
  (the telephone returns to the phonebook's *Review* mode)

Deleting an entry from the phonebook

- Press the **phonebook** key while in idle mode.
- Select *Review* with the **up/down** key and press **OK**
- Choose the desired entry
  (To search for a name, press the first character via the keypad)
- Press **DEL**
- Confirm the message "*Delete?*" with **OK**.

Deleting all entries from the phonebook

- Press the **phonebook** key while in idle mode.
- Select *Delete All* with the **up/down** key and press **OK**
- Confirm the message "*Sure?*" with **OK**.

The telephone has got 5 memory keys and nine speed dialling keys (2 to 0). Each key can store numbers with up to 24 digits and names with up to 16 characters.

Memory keys (M01-M05)/voice portal key

Dialling a number on a memory key (M01-M05) / voice portal key
- While in idle mode or off-hook, press the desired **memory** key (M1 to M5 / voice portal key)
- If the handset is off hook, the number will be dialled after 2s.

Saving numbers to memory keys (M01-M05) / voice portal key
- While in idle mode press a **memory** key (M01 to M05/voice portal key) for longer than 2s
- Press **OK** (the first character will flash)
- Enter the number using the keypad and **DEL** key
- Press **OK** to save the number and go to the name line
- Enter the name and press **OK** to save the entry.

Deleting numbers on memory keys (M01-M05) / voice portal key
- While in idle mode press a **memory** key (M01 to M05/voice portal key)
- Press **DEL**
- Confirm the message "*Delete?*" with **OK**.

Speed dialling keys (2-0)

Dialling a number on a speed-dialling key (2-0)
- While in idle mode, press and hold down a **speed-dialling** key (2 to 0) for longer than 2s (the unit shows the entry).
  If the handset is off-hook, the number will be dialled immediately.
- Pick up the handset to dial the number. The number will be dialled 2s after the handset has been taken off hook.

Saving a number to a speed-dialling key
- While in idle mode, press and hold down a **speed-dialling** key (2 to 0) for longer than 3s (the unit shows the memory mode)
- Press **OK** to edit the memory
- Enter the desired number and press **OK** to go to the name line
- Enter the name via the keypad and press **OK** to save the data.

Saving the number of the Combox

(No number has been saved to key 1)
- Press the **Menu** key while in idle mode
- Select *Combox* with the **up/down** key and press **OK** (the first character will flash)
- Enter the number using the keypad and **DEL** key
- Press **OK** to save the number and edit the name.
- Enter the name and press **OK** to save the entry.

Editing the Combox number

- Press the **Menu** key while in idle mode
- Select *Combox* with the **up/down** key and press **OK**
- Press **OK** (the first character will flash)
- Choose the position to edit the number with the **up/down** key and change the number with the keypad or delete it with the **DEL** key
- Press **OK** to save the number and go to the name line.
- Edit the name via the keypad.
- Press **OK** to save the entry.

Deleting the Combox number

- Press the **Menu** key while in idle mode
- Select *Combox* with the **up/down** key and press **OK**
- Press **DEL**
- Confirm the message "*Delete?*" with **OK**.

Dialling the number of the Combox

Note: If no number has been saved for the Combox (or it has been deleted), then the telephone will request you to enter and save a number for device.

- While in idle mode or off-hook, press and hold the "**1**" key for more than 3s
- If the handset is off hook, the number will be dialled after 2s.

While in the idle mode, press the **Menu** key to enter the menu operation. Press the **up/down** key to select the desired item. The timeout for the setting mode is 20s. The possible settings you can make are stated below:

Ringer tone setting

- Press the **Menu** key while in idle mode
- Select *Ringer Tone* with the **up/down** key and press **OK**
- Select the desired ring tone and press **OK**.

Ringer volume setting

- Press the **Menu** key while in idle mode
- Select *Ringer Sound* with the **up/down** key and press **OK**
- Select the desired ringer volume and press **OK**.

Contrast setting

- Press the **Menu** key while in idle mode
- Select *Contrast* with the up/down key and press **OK**
- Select the desired contrast and press **OK**.

Flash time setting

- Press the **Menu** key while in idle mode
- Select *Flash Time* with the **up/down** key and press **OK**
- Select the desired flash time (100 or 300ms) and press **OK**.

Date/time setting

If the date and time are transmitted by the telephone network, the setting will be made automatically during an incoming call (except for the year).

- Press the **Menu** key while in idle mode
- Select *Date/Time* with the **up/down** key and press **OK**
- Enter the date and the time with the keypad (DD/MM/YY hh/mm)
- Press **OK**.

Language setting

- Press the **Menu** key while in idle mode
- Select *Language* with the **up/down** key and press **OK**
- Select the desired language and press **OK** (English, German, French, Italian)

Reset

There are two kinds of resets that can be done:

Reset 1: Resets the telephone to the factory default mode
All settings, lists and memories will be reset

Reset 2: Only resets the telephone settings to the factory default mode.
No numbers saved in memories will be deleted (phonebook, speed-dialling/memory and lists).

- Press **Menu**
- Choose *Reset1* or *Reset2* via the **up/down** key and press **OK**
- Confirm the message "*Sure?*" with **OK**.

Default settings

Description	Default Setting
LCD contrast	3
Language	German
Date	01/01(-07) 12:00
Dialling mode	Tone
Flash	100ms
Pause	2s
Voice portal key	0848 849 850
CID memory	Empty
Direct memory (speed-dialling)	Empty
Phonebook memory	Empty
Redial memory	Empty
Ringer volume	3
Ringer tone	1

Maintenance/Warranty

Rental devices
If your phone does not operate properly, notify Technical Assistance (phone number 175). The repair[1)] and the fault action are free of charge.

Purchased devices
Repair services are performed frees of charge within the warranty period in accordance with the regulation of the warranty certificate. If a repair is necessary, the device must be returned to the place of purchase.
If Technical Assistance is made available (during the warranty period a well), the fault action is charged (route lump sum price as well as time expenses). The repair costs are additional outside the warranty period.

Help
If you have any general questions about products, services, etc., please contact your Swisscom Information Centre (toll free number 0800 800 800).

General remark
[1)] except for damage to wearing parts (cables, labels, batteries etc.) and damage arising from incorrect handling such as dropping it or allowing fluid to penetrate into device etc.

Conformity

This device is intended to be operated on the analogue Swiss network. Countryspecific conditions have to be taken into account. If you have any questions about the differences between the public phone networks, please contact your specialist dealer or network provider.

Swisscom hereby declares that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

The Declaration of Conformity can be found the following web site:
www.swisscom.com/onlineshop under the rubric, Phone, Declaration of Conformity or can be ordered from the following postal address:

Swisscom Fixnet Ltd
Residential
Customer Premises Equipment (CPE)
CH-3050 Bern

swisscom fixnet